

ASSEMBLY INSTRUCTIONS

u.s.w. 95.060. / u.s.w. 95.061. / usw. 95.062. / u.s.w. 95.064. / usw. 95.066.

FITTING HOT AND COLD VALVES

1. Flush through the supply pipes.
2. Remove various parts from the carton with extreme care.
3. Unscrew levers (A) (A'), grub screws (B) (B') with enclosed allen key 3 and remove handles (C) (C').
4. Unscrew bodies (D) (D') and base rings (E) (E').
5. Assemble valves (F) (F') following the opposite operation sequence of above. Maximum top thickness allowed: 43 mm.

FITTING SPOUT - CONNECTING HOSES

1. Place spout (G) through the top hole and tighten nut (I) onto shank (H) after positioning clamp (L) with seat (L') matching nut (I) as indicated in the drawing.
2. Fully push into position crossbar (M) and hand tighten with nut (N).
3. Connect red hose (O') to crossbar (M).
Connect (O) to valve (F).
4. Connect blue hose (P') to crossbar (M).
Connect (P) to valve (F').
5. Connect red hose (Q) to valve (F)
Connect (Q') to mains hot water.
6. Connect blue hose (R) to valve (F').
Connect (R') to the mains cold water.
7. We recommend to install between the mains and the faucet a water filter which should regularly be cleaned.

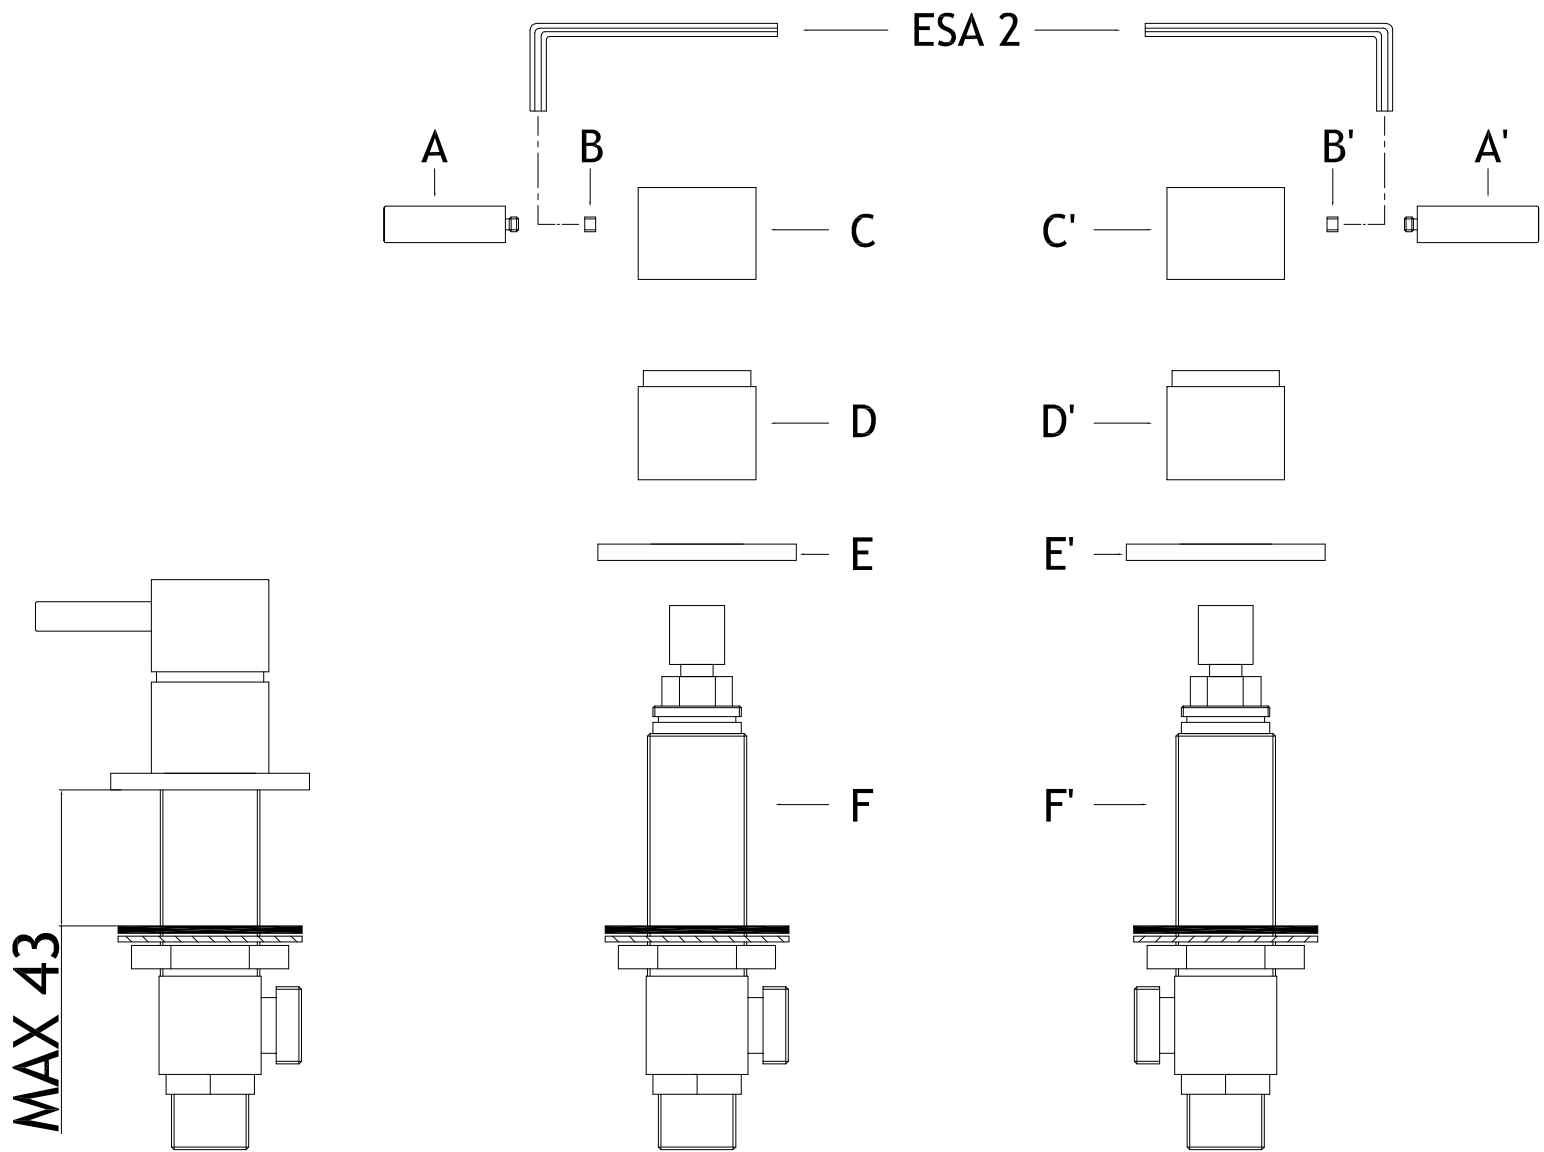


FIG 1

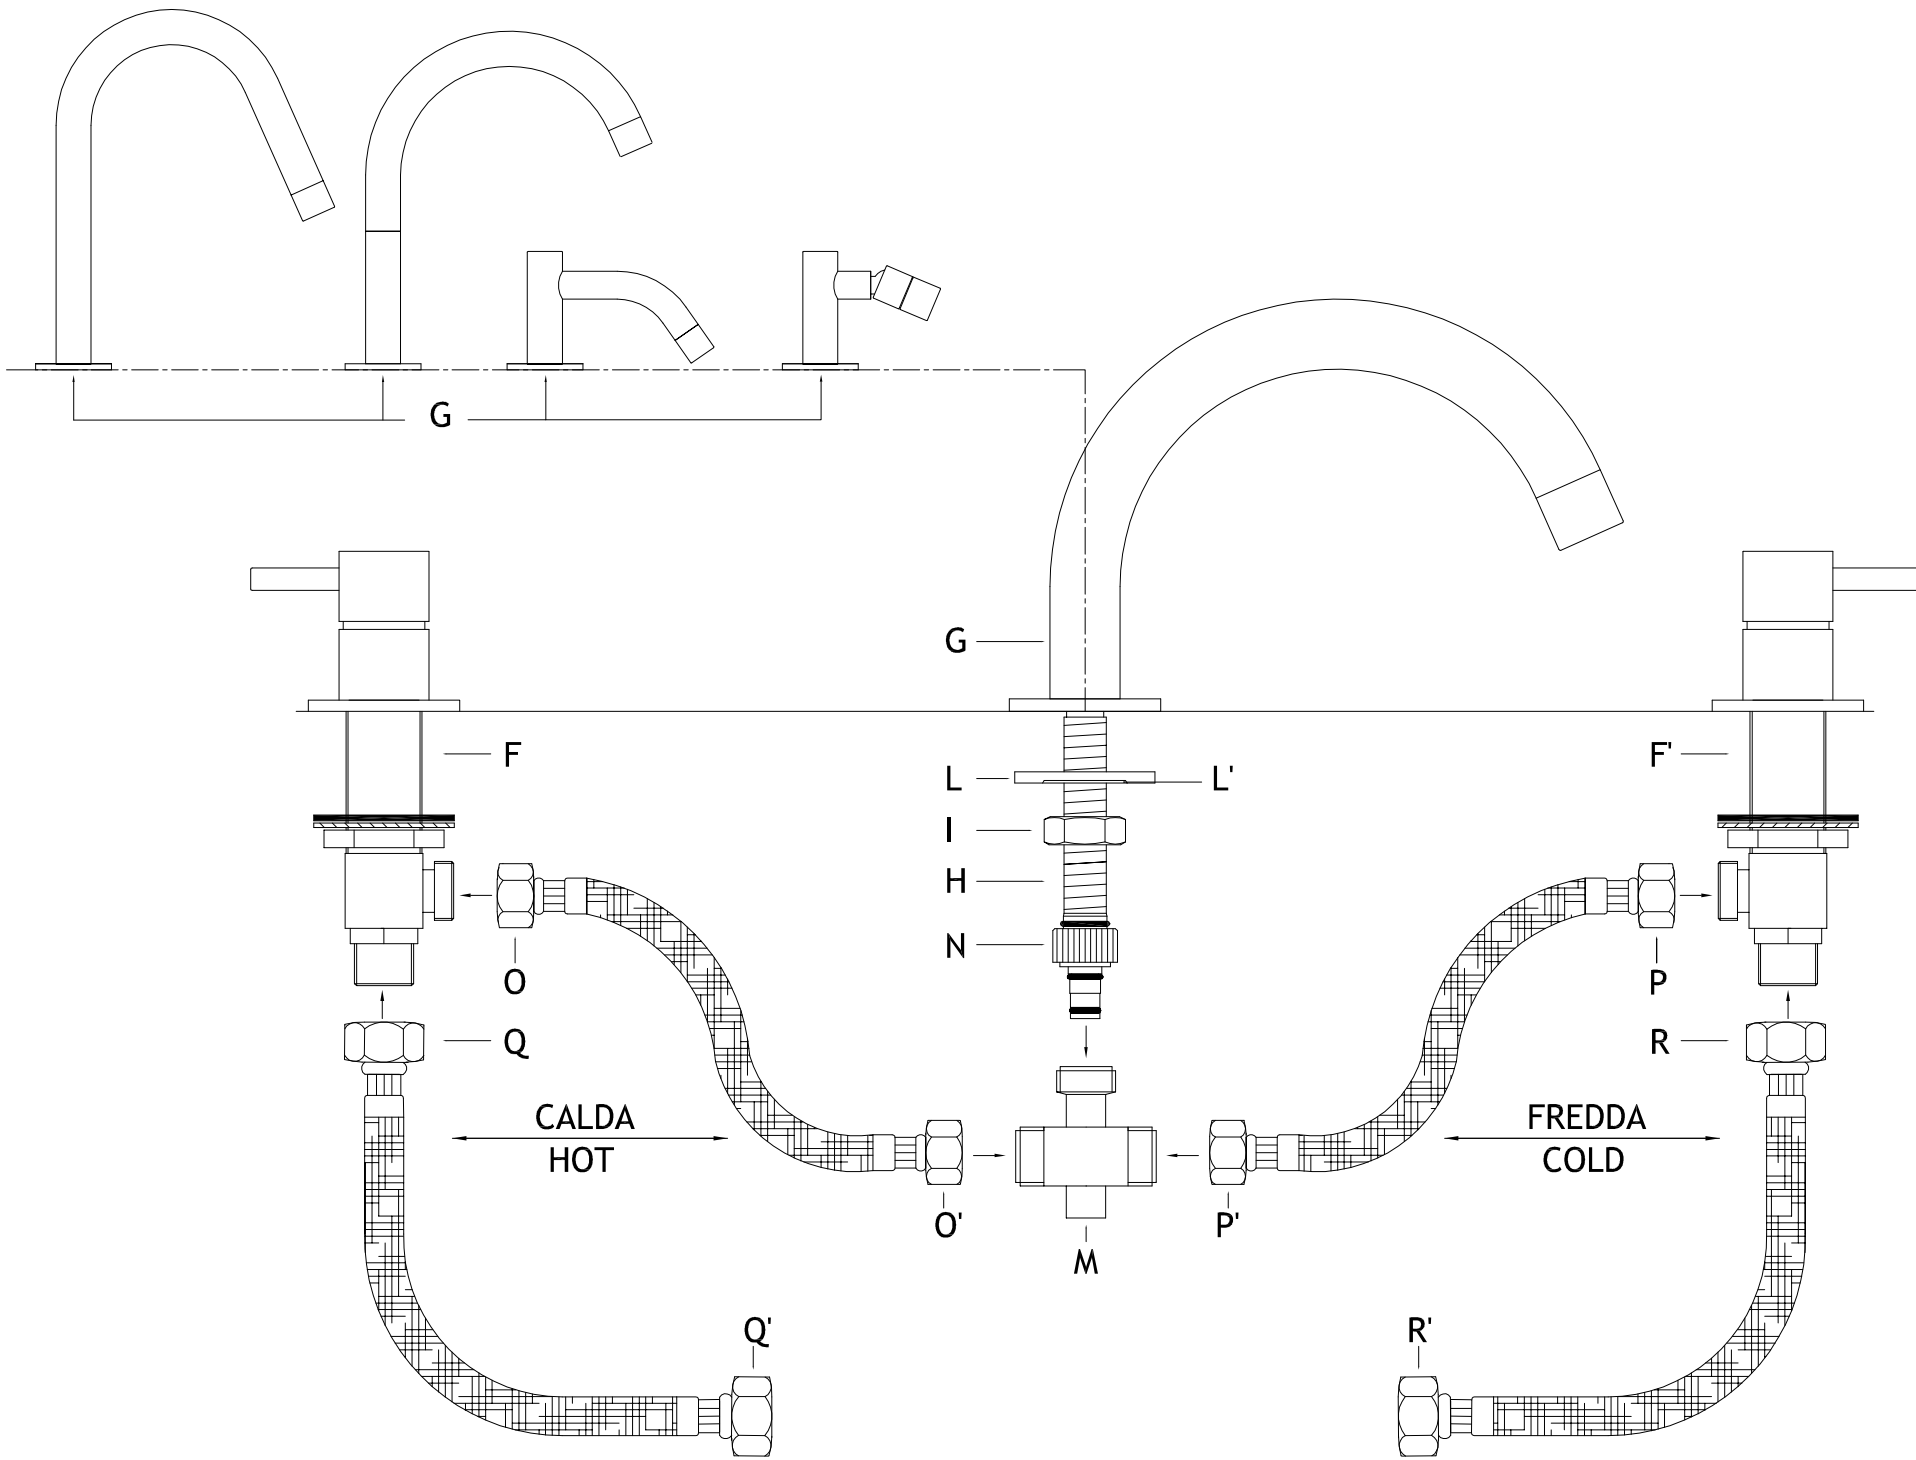


FIG 2